

Make A Pair Of Amethyst & Swarovski Earrings

Courtesy of *Jeweltailor.com*

1. Take a headpin and thread on your beads



2. Take your cutting pliers and cut the end of the headpin so that about 1cm is left. Take your round nose pliers and bend the wire 90 degrees as shown.




3. Place your pliers at the end of the bent headpin and slowly start to curl it back towards you so that it forms a loop.



4. Your finished loop should resemble the one below



5. Open the loop at the base of the earwire and thread it onto the headpin.

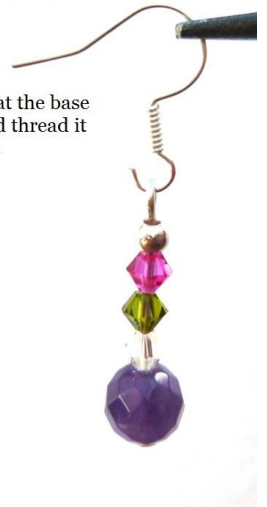

Congratulations!
Your Earrings Are Complete

